

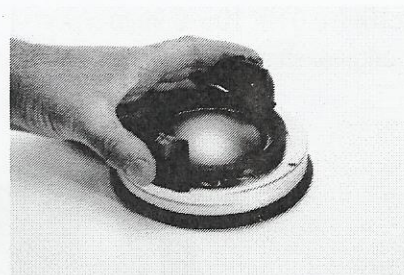
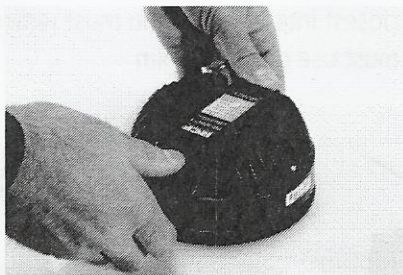
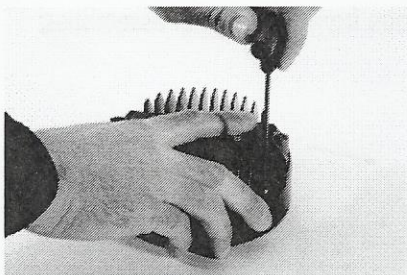


RCF COMPRESSION DRIVER PROCEDURE FOR DIAPHRAGM REPLACEMENT

1. Unscrew driver's cup. Holding the diaphragm assemblies in place through the terminals.

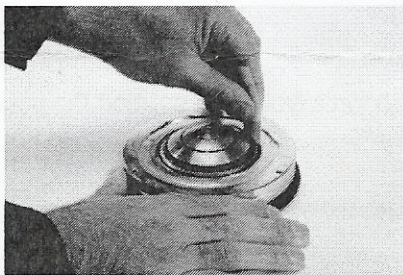

2. Remove diaphragm assemblies; in case of shims presence, please count and save them for the step 4.

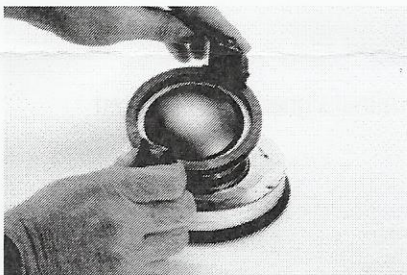

3. Visually inspect the gap and make sure that it is clean (in case of particles presence use adhesive tape wounded on a little strip to remove them). Gap must be completely free of any particle.



the rules of sound

